

 



 

 





 



 
 


 







 



 



 

 



 

 



 

 



 



 











Original	Rechange	Original	Rechange
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9





 



 

 

 

 

 



 





































 







 





Original	Recharge
0	0
MEDIA	Media Display / Media
USB	SHIFT + USB 8 Shift + 8
TV/RADIO	PROGRAM TV/RADIO TV/Radio /
AUDIO	LANG I/II AUDIO Audio / Lang I/II
TTX	GOTO TEXT Text / Goto
TIMER	TIMER SLEEP Sleep / Timer
FAV	PC FAV MARKER Fav / Marker / PC
RES	LIST SMART Smart / List
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Recharge





Original	Recharge	Original	Recharge
 Standby	 Power	 Right / Vol+	 Vol+
 Info	 Info / Angle	 Right / Vol+	 Right
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down / CH-	 Down
 I<<	 I<< / Preset-	 Down / CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up / CH+	 CH+ / Page+	 5	 5
 Up / CH+	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left / Vol-	 Vol-	 7	 7
 Left / Vol-	 Left	 8	 8
 OK	 OK	 9	 9





Original	Recharge
0	HDMI - BAT 0
MEDIA	Media Display / Media
USB	SHIFT + USB 8 Shift + 8
TV/RADIO	PROGRAM TV/RADIO TV/Radio /
AUDIO	LANG I/II AUDIO Audio / Lang I/II
TTX	GOTO TEXT Text / Goto
TIMER	TIMER SLEEP Sleep / Timer
FAV	PC FAV MARKER Fav / Marker / PC
RES	LIST SMART Smart / List
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Recharge

