

































Original	Recharge	
Audio		Audio / Lang I/II
AFFICHE		Power
Open / Close - OUVRE-FERME		Eject / Surround
Angle		Info / Angle
1		1
Subtitle - SOUS TITRE		Subtitle / EQ
Search -		Red / Netflix / Search
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Menu		Menu / Home

Original	Recharge	
PRG		TV/Radio /
CLR - EFF		Exit / Cancel / Clear
Up		Up
Left		Left
OK		OK
Title - TITRE		Sound / Title
Right		Right
Down		Down
Vol+		Vol+
MODE		Smart / List
Vol-		Vol-
ZOOM		Zoom / Size
A-B		Yellow / YouTube / Repeat
STOP		Stop / Hold
MARK -		Fav / Marker / PC
Return -		Back / Return
Setup - REGL		Setup / OPT /





Original	Rechange	Original	Rechange
F.Rwd - AR.RAPID	 << / Tune-		
F.Fwd - AV.RAPID	 >> / Tune+		
Mute -	 Mute / Dimmer		
Slow R -	 CH- / Page-		
Slow F -	 CH+ / Page+		
Skip+ / SAUT+	 >>I / Preset+		
Skip- / SAUT-	 I<< / Preset-		
PAUSE/IMAGE	 Pause / Step / Freeze		
Play - LECTURE	 Play / Slow		

