



Original	Recharge
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual






 







 

 



 

 

 

 

 

 

 






 







Original	Recharge
Sleep	Sleep
Dim	TV/R
P.Scan	Text
A.Preset	AV
MEM	Format
RDS	Subt
Prev.CH	Pre Ch
I<	I<<
<<	<<
>>	>>
>I	>>I
Stop	Stop
Play	Play
Pause	Pause
Phono	Shift + 1
FM/AM	Shift + 2
USB	Shift + 3

Original	Recharge
Bluetooth	Shift + 4
vTuner	Shift + 5
Network	Shift + 6
AUX	Shift + 7
Digital	Shift + 8





Original	Rechange
 Power On	 Power
 Power Off	 Shift + Power
 Left	 Left
 Right	 Right
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+ Stereo	 Vol +
 Vol- Stereo	 Vol -
 Stereo	 Dual

Original	Rechange
 Cable/Sat	 Green
 CD	 Yellow
 TV	 Blue
 Mute	 Mute





Original		Rechange		Original		Rechange	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/SAT		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+ Stereo		Vol +
	Down		Down		Vol- Stereo		Vol -
	Right		Right		CH/Tuner Down		Ch +
	Left		Left		CH/Tuner Up		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original		Rechange		Original		Rechange	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

