



Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		Left		Left
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		EPG		Guide / EPG / -/--
	3		3		Down		Down
	4		4		Text		Text / Goto
	5		5		Vol+		Vol+
	6		6		Mute		Mute / Dimmer
	7		7		P+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		♪/I-II		Display / Media
	Pro. List		Smart / List		P-		CH- / Page-
	0		0		Red		Red / Netflix / Search
	Last		Back / Return		Green		Green / APP / Repeat
	Info		Info / Angle		Yellow		Yellow / YouTube / Repeat
	Up		Up		Blue		Blue / Prime Video / Random
	Menu		Menu / Home		[≡i]/Index		Shift + AV / Input / RDS





	Original	Recharge	
	[/ =] / Mix	 +  Shift + Text /	
	[≡ ◆] / Size	 Zoom / Size	
	[≡ B] / Subtitle	 Subtitle / EQ	
	[≡ +] / Hold	 Stop / Hold	
	[≡ ?] / Reveal	 +  Shift + Info / Angle	
	(·) / Sound	 Sound / Title	
	[] / Pict	 Picture / Format	
	♥ / FAV	 Fav / Marker / PC	
	* / Freeze	 Setup / OPT /	
	Sleep	 Sleep / Timer	
	[< >] / Aspect	 D.Menu / Top	

	Original	Recharge

