 





 



 
 

 




 
 

 
 

 
 

















 



 




 


 





 










Original		Rechange		Original		Rechange	
	Power		Power		→□←		3D
	Mute		Mute		OK		Ok
	1		1		Up		Up
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Down		Down
	8		8		Right		Right
	5		5		Vol+		Vol +
	6		6		Left		Left
	7		7		Vol-		Vol -
	9		9		Red		Red
	0		0		Green		Green
	Source		AV		Yellow		Yellow
	Recall		Pre Ch		Blue		Blue
	Menu		Menu		[i+]		Info
	Exit		Exit		Swap		Sleep
	[<>]		Format		O)/ /		Dual





Original		Recharge		Original		Recharge	
	[≡?]		GUIDE				
	[▼]		HOME SMART				
	[■]/[  ]		SETTINGS OPT				
	[≡i]		APP MEDIA				
	[≡]		REPEAT TEXT				
	[≡o]		AD SUBT				
	[O]/[≡x]		SEARCH TV/R				
	[≡♦]		ZOOM				
	[≡+]		SHIFT + ECO 3D				

