 


 




 


 








 

 
 

 





 
 

 





 





Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute
	V.Format		Format
	Sleep		Sleep
	FAV		Pre Ch
	Tv/♪		TV/R
	AV		AV
	SAT		Media
	Zoom		Eject
	Camera		Smart
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Info		Info
	Back		Back
	Menu		Menu
	[≡]		Text
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	↑		Shift + Up
	↓		Shift + Down
	Red		Red
	Green		Green
	Yellow/Audio		Yellow
	Blue/[...]		Blue
	1		1
	2		2
	3		3





Original		Rechange		Original		Rechange	
	4		4		>		Dual
	5		5		> <		3D
	6		6		[   ]		List
	7		7		[  -> ]		D. Menu
	8		8				
	9		9				
	0		0				
	≡>		Options				
	V		Subt				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				

