



































Original	Recharge
PWR On/Off	 Power
Mute	 Mute / Dimmer
App	 Shift + Green / APP /
Info	 Info / Angle
Subt.List	 Subtitle / EQ
TV	 TV/Radio /
Video	 Shift + 4
Text	 Text / Goto
Zoom	 Zoom / Size
Menu	 Menu / Home
TV/SAT	 AV / Input / RDS
Menu Up	 Up
Display	 Display / Media
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Exit	 Exit / Cancel / Clear

Original	Recharge
Menu Down	 Down
Back	 Back / Return
Volume+	 Vol+
CH/Page+	 CH+ / Page+
Volume-	 Vol-
Audio	 Audio / Lang I/II
CH/Page-	 CH- / Page-
1. ?	 1
2abc	 2
3def	 3
4ghi	 4
5jkl	 5
6mno	 6
7pqrm	 7
8tuv	 8
9wxyz	 9
Guide Pilote	 Guide / EPG / -/-



