



Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Rechange
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





	Original	Recharge	Original	Recharge
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 TITLE SOUND		Sound / Title
	[-O-]	 OPT-TOOLS SETUP		Setup / OPT /
	<<	 TUNE- <<		<< / Tune-
	Pause	 STEP-FREEZE 		Pause / Step / Freeze
	>>	 TUNE+ >>		>> / Tune+
	Rec	 REC MODE ●		Rec / Rec Mode
	Play	 SLOW ▶		Play / Slow
	Stop	 HOLD ■		Stop / Hold

