



| Original | | Rechange | | Original | | Rechange | |
|----------|--------|----------|-------------------|----------|--------|----------|--------------------|
| | P100 | | Display / Media | | AV | | AV / Input / RDS |
| | Power | | Power | | 0 | | 0 |
| | REV | | << / Tune- | | -/-- | | Guide / EPG / -/-- |
| | Doub | | Audio / Lang I/II | | P+ | | CH+ / Page+ |
| | 1 | | 1 | | Up | | Up |
| | 2 | | 2 | | Mute | | Mute / Dimmer |
| | 3 | | 3 | | TV/TXT | | TV/Radio / |
| | Hold | | Stop / Hold | | Menu | | Menu / Home |
| | 4 | | 4 | | Left | | Left |
| | 5 | | 5 | | Vol- | | Vol- |
| | 6 | | 6 | | OK | | OK |
| | Sub | | Subtitle / EQ | | Right | | Right |
| | Update | | D.Menu / Top | | Vol+ | | Vol+ |
| | 7 | | 7 | | Swap | | Back / Return |
| | 8 | | 8 | | P- | | CH- / Page- |
| | 9 | | 9 | | Down | | Down |
| | Mix | | Text / Goto | | 16:9 | | Picture / Format |



