


 






































Original	Recharge	Original	Recharge
On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Reveal	 Play / Slow	Volume+	 Vol+
Update	 Pause / Step / Freeze	Chan.Up	 CH+ / Page+
Txt Stop	 Stop / Hold	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Text	 Text / Goto	3	 3
TV/AV	 AV / Input / RDS	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide / EPG / -/--



Original	Recharge	Original	Recharge
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

