






 






 
 

















	Original	Recharge
POWER ON	 Power On	 Power
MUTE	 Mute	 Mute
TV/RADIO	 TV/Radio	 TV/R
FAV	 FAV	 Pre Ch
TV/DBS	 TV/DBS	 Smart
VCR/DBS	 VCR/DBS	 Media
1	 1	 1
2	 2	 2
3	 3	 3
4	 4	 4
5	 5	 5
6	 6	 6
7	 7	 7
8	 8	 8
9	 9	 9
0	 0	 0
FIND	 Find	 3D

	Original	Recharge
RECALL	 Recall	 Back
Up / CH+	 Up / CH+	 Up
Up / CH+	 Up / CH+	 Ch +
Down / CH-	 Down / CH-	 Down
Down / CH-	 Down / CH-	 Ch -
Right / Vol+	 Right / Vol+	 Right
Right / Vol+	 Right / Vol+	 Vol +
Left / Vol-	 Left / Vol-	 Left
Left / Vol-	 Left / Vol-	 Vol -
OK / List	 OK / List	 Ok
OK / List	 OK / List	 List
Menu	 Menu	 Menu
Exit	 Exit	 Exit
PG/UP	 PG/UP	 >>
PG/DW	 PG/DW	  <<
Red / Pause	 Red / Pause	 Red
Red / Pause	 Red / Pause	 Pause



