

 



 

 



 

 

 

 

 

 

 





 

 

 

 

 

 



 





 





















Original		Rechange		Original		Rechange	
	Power		Power		CHN List		Smart / List
	Mute		Mute / Dimmer		0		0
	Picture		Picture / Format		Return / Back		Back / Return
	Sound		Sound / Title		Menu		Menu / Home
	Zoom		Zoom / Size		Up		Up
	Subtitle		Subtitle / EQ		Source		AV / Input / RDS
	EPG		Guide / EPG / -/--		Left		Left
	FAV		Fav / Marker / PC		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Exit		Exit / Cancel / Clear
	4		4		TV / Radio		TV/Radio /
	5		5		Vol +		Vol+
	6		6		Home		D.Menu / Top
	7		7		PR +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		PR -		CH- / Page-





Original	Rechange	Original	Rechange
Rec	Rec / Rec Mode	PVR List	Display / Media
Sleep	Sleep / Timer	Quick	Setup / OPT /
Info	Info / Angle	AD	Eject / Surround
Play/Pause / Index	Play / Slow	3D	+ Shift + 3
Play/Pause / Index	Pause / Step / Freeze		
<< / Reveal	<< / Tune-		
>> / Mix	>> / Tune+		
Stop / Cancel	Stop / Hold		
I<< / Size	I<< / Preset-		
>>I / Sub-Page	>>I / Preset+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
I/II / Nicam	Audio / Lang I/II		
Text	Text / Goto		
Freeze / Hold	+ Shift + Stop / Hold		

Hold

