


 



 

 



 



 

 







 



 






 
 
Original	Recharge
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Recharge
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right






 



 



Original	Rechange
	 Left
	 Ok
	 Ch +
	 Ch -
	 Pre Ch
	 Guide
	 Info
	 List
	 Red
	 Green
	 Yellow
	 Blue
	 Format
	 3D
	 Subt
	 AV
	 Shift + Ch +





 
 




 
 

 

Original	Rechange
	 Shift + Ch -







Original	Recharge	Original	Recharge
Power		Power	Power
Mute		Mute	Mute
[ I ]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Recharge	Original	Recharge
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Recharge	Original	Recharge
Audio	Dual		
I<</[≡+]	I<<		
>>I/[≡..]	>>I		
[≡i]	Smart		
Play	Play		
Pause	Pause		
Stop	Stop		
REP/Rec	Rec		
<</[≡o]	<<		
>>/[≡?]	>>		
FAV	Pre Ch		

