


















































 
 



 

 


Original	Rechange	Original	Rechange
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Update	 Play / Slow	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Rec / Rec Mode	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 Smart / List	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Setup / OPT /	1	 1
Txt Expand	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
Display	 Display / Media	7	 7



Original	Recharge	
8	 8	8
9	 9	9
Guide -/-- 1.	 Guide / EPG / -/--	
0/10	 0	0
2.Fav P/C 2.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Audio-	 I<< / Preset-	
Audio+	 >>I / Preset+	
Color+ P.Std	 Picture / Format	
Game Coo	 Shift + Text /	
AV 2	 Shift + AV / Input / RDS	
Bright+ Mode	 Shift + Menu /	
Disp	 Info / Angle	
Tune-	 << / Tune-	

Original	Recharge	
Tune+	 >> / Tune+	
Bright- Sys	 Shift + Exit / Cancel / Clear	
Contrast+	 Shift + CH+ /	
Contrast-	 Shift + CH- /	
Color- S.Std	 Sound / Title	
Surround	 Eject / Surround	
Nicam/Mono	 Shift + Green / APP /	
Level L	 Shift + Yellow / YouTube /	
Level R/Woofers	 Shift + Blue / Prime	

