








 
Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡o]	 << / Tune-
 >> / [≡?]	 >> / Tune+
  << / [≡+]	  << / Preset-
 >>  / [≡..]	 >>  / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Smart / List
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze



Original	Recharge
 Info	 Info / Angle
 [   ] / Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH+	 CH+ / Page+
 Vol-	 Vol-
 REP/Rec	 Rec / Rec Mode
 CH-	 CH- / Page-
 1	 1







Original	Recharge	Recharge
Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</Hold		<< / Tune-
>>/Index		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Nicam/A2		Audio / Lang I/II
Subtitle		Subtitle / EQ
Subpage		Eject / Surround
Size		Zoom / Size
Sleep		Sleep / Timer
DTV/Radio		TV/Radio /
Reveal		D.Menu / Top































Original	Recharge	Recharge
TXT/MIX		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
Enter		OK
Right		Right
Cancel		Exit / Cancel / Clear
Down		Down
Back		Back / Return
Vol+		Vol+
List		Smart / List
CH+		CH+ / Page+
Vol-		Vol-
Mode		Display / Media
CH-		CH- / Page-
1		1







Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Recharge	Original	Recharge
5	TAPE <b>5</b>		5
6	TUNER <b>6</b>		6
7	AUX - HDD <b>7</b>		7
8	USB <b>8</b>		8
9	BLUETOOTH <b>9</b>		9
Epg	GUIDE EPG		Guide / EPG / -/--
0	HDMI - SAT <b>0</b>		0
Fav	PC FAV MARKER		Fav / Marker / PC
Red	NETFLIX SEARCH		Red / Netflix / Search
Green	APP REPEAT		Green / APP / Repeat
Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
Blue	Prime Video RANDOM		Blue / Prime Video / Random
Freeze	SHIFT + STEP - FREEZE		Shift + Pause / Step /

