



Original	Rechange
TEST Test	GOTO TEXT Text / Goto
1 1	1 1
1 1 FM/AM	SHIFT + TV 1 Shift + 1
2 2	DVD 2 2
2 2 FM/AM	SHIFT + DVD 2 Shift + 2
3 3	CD - STB 3 3
3 3 FM/AM	SHIFT + CD - STB 3 Shift + 3
EFFECT Effect	FORMAT PICTURE Picture / Format
4 4	VIDEO 4 4
4 4 FM/AM	SHIFT + VIDEO 4 Shift + 4
5 5	TAPE 5 5
5 5 FM/AM	SHIFT + TAPE 5 Shift + 5
6 6	TUNER 6 6
6 6 FM/AM	SHIFT + TUNER 6 Shift + 6
7/P 7/P	SHIFT + AUX - HDD 7 Shift + 7
7/P 7 FM/AM	AUX - HDD 7 7
8 8	USB 8 8

Original	Rechange
8 8 FM/AM	SHIFT + USB 8 Shift + 8
9 9	BLUETOOTH 9 9
9 9 FM/AM	SHIFT + BLUETOOTH 9 Shift + 9
LEVEL Level- SURR L	DOWN Down
LEVEL Level - SURR R	SHIFT + DOWN Shift + Down
LEVEL Level- Center	SHIFT + CH PAGE - Shift + CH- /
LEVEL Level- SUBWFR	LEFT Left
LEVEL Level- Front L	VOL - Vol-
LEVEL Level- Front R	CH PAGE - CH- / Page-
LEVEL+ Level+ SURR L	UP Up
LEVEL+ Level+ SURR R	SHIFT + UP Shift + Up
LEVEL+ Level+ Center	SHIFT + CH PAGE + Shift + CH+ /
LEVEL+ Level+ SUBWFR	RIGHT Right
LEVEL+ Level+ Front L	VOL + Vol+
LEVEL+ Level+ Front R	CH PAGE + CH+ / Page+
10/Return 10/Return	SHIFT + GUIDE EPG Shift + Guide / EPG / -/-
10 10 FM/AM	GUIDE EPG Guide / EPG / -/-





Original		Rechange	
	0		0
	+10/+100		Fav / Marker / PC
	+10 FM/AM		Shift + 0
	Play/TA/News/Info		Shift + Play /
	Play FM/AM		Play / Slow
	I<</PTY-		Shift + I<< / Preset-
	I<<FM/AM		I<< / Preset-
	Pause/PTY Search		Shift + Pause / Step /
	Pause FM/AM		Pause / Step / Freeze
	>>I/PTY+		Shift + >>I / Preset+
	>>I FM/AM		>>I / Preset+
	Stop/Display		Shift + Stop /
	Stop FM/AM		Stop / Hold
	FM/AM		Shift + TV/Radio / Program
	FM Mode		TV/Radio /

Original		Rechange	



 

















 
 
 



 




 






 
 





 


























Original	Recharge
Up	Up
Left	Left
Right	Right
Menu	Menu / Home
Down	Down
Enter	OK
Play/TA/News/Info	Shift + Play /
Play VCR	Play / Slow
I<</PTY-	Shift + I<< / Preset-
I<< VCR	I<< / Preset-
Pause/PTY Search	Shift + Pause / Step /
Pause VCR	Pause / Step / Freeze
>>I/PTY+	Shift + >>I / Preset+
>>I VCR	>>I / Preset+
Rec Pause VCR	Rec / Rec Mode
Stop/Display	Stop / Hold
Stop VCR	Shift + Stop / Hold

Original	Recharge





Original		Recharge		Original		Recharge	
	Audio Standby		Audio / Lang I/II		FM/AM		Shift + TV/Radio / Program
	1		1		VCR		Shift + 4
	2		2		Analog/Digital		Smart / List
	3		3		FM/Mode		AV / Input / RDS
	TV Standby		Power		Surround		Eject / Surround
	4		4		DSP		Text / Goto
	5		5		Surround DSP		Sound / Title
	6		6		Dimmer		Shift + Mute / Dimmer
	VCR Standby		Shift + Power		Tv/Video		TV/Radio /
	7/P		7		Muting		Mute / Dimmer
	DVD Standby		Shift + 2		VCR CH+		Shift + CH+ /
	Play/TA/News/Info		Play / Slow		Tv CH+		CH+ / Page+
	Sleep		Sleep / Timer		Tv Vol+		Shift + Vol+
	I<</PTY-		I<< / Preset-		Vol+		Vol+
	Pause/PTY Search		Pause / Step / Freeze		VCR CH-		Shift + CH- /
	>>I/PTY+		>>I / Preset+		Tv CH-		CH- / Page-
	Stop/Display		Stop / Hold		Tv Vol-		Shift + Vol-




 



 


 









Mode







Original	Rechange	Original	Rechange





Original		Rechange	
	1 TV Sound		1
	2 TV Sound		2
	3 TV Sound		3
	4 TV Sound		4
	5 TV Sound		5
	6 TV Sound		6
	7 TV Sound		7
	8 TV Sound		8
	9 TV Sound		9
 RETURN	10 TV Sound		Guide / EPG / -/--
	0 TV Sound		0
	+10 TV Sound		Fav / Marker / PC
	Play		Play / Slow
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Rec Pause		Rec / Rec Mode

Original		Rechange	
	Stop		Stop / Hold
	TV Sound		Sound / Title

