 





 











 








Original		Rechange		Original		Rechange	
	Power		Power				
	TV PR-		CH- / Page-				
	PR-		Left				
	TV P-		Down				
	TV PR+		CH+ / Page+				
	PR+		Right				
	TV P+		Up				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				

