




 

 

 
 



 






 



 

 
 
 


 

 








Original		Rechange		Original		Rechange	
	Power		Power		FM/AM		TV/Radio /
	1		1		Timer		Sleep / Timer
	2		2		I<<		I<< / Preset-
	3		3		<< Preset		<< / Tune-
	4		4		>>I		>>I / Preset+
	5		5		Preset >>		>> / Tune+
	6		6		Tuning/Group/PTY		CH+ / Page+
	7		7		Tuning/Group/PTY Down		CH- / Page-
	8		8		PTY Search		AV / Input / RDS
	9		9		Display/Progra		Shift + Display / Media
	0		0		News/Info		Info / Angle
	+10		Guide / EPG / -/--		Display Mode		Display / Media
	Stop		Stop / Hold		Repeat		Green / APP / Repeat
	Play/Pause CD		Play / Slow		Random		Blue / Prime Video / Random
	Tape		Shift + 5		Sound Mode		Sound / Title
	Fade Muting		Mute / Dimmer		HBS		Subtitle / EQ
	Clock/Sleep		Smart / List		Vol+		Vol+



