



| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|-------------------|---|----------|---|---------------------------|
|  | Sound Mode |  | Sound / Title |  | 8 |  | 8 |
|  | FM Mode/Mute |  | Audio / Lang I/II |  | 8 CD |  | Shift + 8 |
|  | Power |  | Power |  | 9 |  | 9 |
|  | 1 |  | 1 |  | 9 CD |  | Shift + 9 |
|  | 1 CD |  | Shift + 1 |  | 10 |  | 0 |
|  | 2 |  | 2 |  | 10 CD |  | Shift + 0 |
|  | 2 CD |  | Shift + 2 |  | +10 |  | Guide / EPG / -/- |
|  | 3 |  | 3 |  | +10 CD |  | Shift + Guide / EPG / -/- |
|  | 3 CD |  | Shift + 3 |  | Tuner |  | Fav / Marker / PC |
|  | 4 |  | 4 |  | AUX |  | AV / Input / RDS |
|  | 4 CD |  | Shift + 4 |  | Program |  | TV/Radio / |
|  | 5 |  | 5 |  | Cancel |  | Exit / Cancel / Clear |
|  | 5 CD |  | Shift + 5 |  | I<< CD |  | I<< / Preset- |
|  | 6 |  | 6 |  | >>I CD |  | >>I / Preset+ |
|  | 6 CD |  | Shift + 6 |  | Stop CD |  | Stop / Hold |
|  | 7 |  | 7 |  | Play CD |  | Play / Slow |
|  | 7 CD |  | Shift + 7 |  | < Deck A |  | Left |



