







 







 



 



 



 



 



 





 




 




 



















Original		Rechange		Original		Rechange	
	TV/R		TV/Radio /		Mute		Mute / Dimmer
	On/Off		Power		P-		CH- / Page-
	1		1		i		Info / Angle
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		EPG		Guide / EPG / -/-
	7		7		Up		Up
	8		8		Media		Display / Media
	9		9		Left		Left
	Menu		Menu / Home		OK		OK
	0		0		Right		Right
	Text		Text / Goto		Back		Back / Return
	Vol-		Vol-		Down		Down
	P+		CH+ / Page+		Portal		Smart / List
	Vol+		Vol+		<<		<< / Tune-





Original	Recharge	Original	Recharge
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

