





Original	Rechange
 Power	 Power
 Display	 Shift + Info
 Mute	 Mute
 Source	 Shift + AV
 Sleep	 Sleep
 Picture	 Shift + Format
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 QV	 Pre Ch
 SUBTL	 Subt
 EPG	 Guide
 Page +	 Shift + Ch +
 Page -	 Shift + Ch -
 Info	 Info
 ATV Menu	 Shift + Menu
 DTV Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 CH +	 Ch +
 CH -	 Ch -
 I/II / Exit	 Exit
 I/II / Exit	 Shift + Dual





	Original	Recharge
	Vol +	 Vol +
	Vol -	 Vol -
	Text	 Text
	Index	 Smart
	Cancel	 Back
	Size	 Format
	Mix	 Shift + Text
	SubPg	 Shift + Subt
	Reveal	 Options
	Hold	 Stop
	TV	 Shift + TV/R
	AV	 AV
	VGA	 Media
	DTV	 TV/R
	Red	 Red
	Green	 Green
	Yellow	 Yellow

	Original	Recharge
	Blue	 Blue

