





 





 






Original		Rechange		Original		Rechange	
	Power		Power		Right		Right
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		<<		<<
	4		4		>>		>>
	5		5		l<<		l<<
	6		6		Stop		Stop
	7		7		>>l		>>l
	8		8		Play		Play
	9		9		Pause		Pause
	0		0		Step		Sleep
	Open/Close		Eject		Audio		Dual
	Title Menu		D. Menu		Subpic		Subt
	Menu		Menu		Angle		Smart
	Back		Back		Zoom		Shift + Eject
	Up		Up		Repeat		Text
	Down		Down		Mark		Media



