




 

 









 







 











| Original   | Rechange   |
|--|--|
|  Power  |  Power                |
|  Mute   |  Mute / Dimmer        |
|  1      |  1                    |
|  2      |  2                    |
|  3      |  3                    |
|  4      |  4                    |
|  5      |  5                    |
|  6      |  6                    |
|  7      |  7                    |
|  8      |  8                    |
|  9     |  9                   |
|  ECO  |  Display / Media    |
|  0    |  0                  |
|  EPG  |  Guide / EPG / -/-- |
|  Vol+ |  Vol+               |
|  CH+  |  CH+ / Page+        |
|  Vol- |  Vol-               |

| Original   | Rechange  |
|--|---|
|  Smart Key      |  Shift + Smart / List  |
|  CH-            |  CH- / Page-           |
|  Info           |  Info / Angle          |
|  Source         |  AV / Input / RDS      |
|  Return         |  Back / Return         |
|  Menu           |  Menu / Home           |
|  Exit           |  Exit / Cancel / Clear |
|  Up             |  Up                    |
|  Left / Zoom-   |  Left                  |
|  OK             |  OK                    |
|  Right / Zoom+ |  Right                |
|  Rec          |  Rec / Rec Mode      |
|  Down         |  Down                |
|  TimeShift    |  Sleep / Timer       |
|  Text         |  Text / Goto         |
|  Subtitle     |  Subtitle / EQ       |
|  List         |  Smart / List        |



