



 



 











 



 







 




 






 
 



















 
 





Original	Recharge	Original	Recharge
 Function	 Smart / List	 Return	 Back / Return
 Power	 Power	 Rec	 Rec / Rec Mode
 Open/Close	 Eject / Surround	 Stop	 Stop / Hold
 Sleep	 Sleep / Timer	 Play/MO/ST	 Play / Slow
 Title	 Sound / Title	 Pause/Step	 Pause / Step / Freeze
 Display	 Display / Media	 I<< Skip	 I<< / Preset-
 Menu	 Menu / Home	 << Scan	 << / Tune-
 Setup	 Setup / OPT /	 Scan >>	 >> / Tune+
 Up / Preset Up	 Shift + >> / Preset+	 Skip >>I	 >>I / Preset+
 Up / Preset Up	 Up	 Random/Repeat	 Green / APP / Repeat
 Right/Tun+	 Right	 Random/Repeat	 Blue / Prime Video / Random
 Right/Tun+	 Shift + >> /	 Vol+	 Vol+
 Left/Tun-	 Shift + << /	 EQ ♪	 Shift + Subtitle / EQ
 Left/Tun-	 Left	 EQ ♪	 Audio / Lang I/II
 Enter	 OK	 Mute	 Mute / Dimmer
 Down / Preset	 Shift + I<< / Preset-	 Vol-	 Vol-
 Down / Preset	 Down	 Clear	 Exit / Cancel / Clear



Down



Original	Rechange
1	1
2	2
3	3
[...] / Subtitle	Subtitle / EQ
4	4
5	5
6	6
Prog/Memo	TV/Radio /
7	7
8	8
9	9
0	0
Power Tv	Shift + Power
PR/CH+ Tv	Shift + CH+ /
Vol+ Tv	Shift + Vol+
RDS	AV / Input / RDS
Input Tv	Shift + AV / Input / RDS

Original	Rechange
PR/CH- Tv	Shift + CH- /
Vol- Tv	Shift + Vol-
PTY	Text / Goto

