



Original	Recharge
Power	Power
Mute	Mute / Dimmer
Tuner/Band	Shift + 6
DVD	Shift + 2
Portable	Shift + 3
USB	Shift + 8
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
EQ	Shift + Subtitle / EQ

Original	Recharge
XDSS plus	Smart / List
Sound Mode	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Return	Back / Return
Setup	Setup / OPT /
Up/Preset+	Up
Display	Display / Media
Left/Tun.-	Left
Select/Enter	OK
Right/Tun.+	Right
Menu	Menu / Home
Down/Preset-	Down
Title	Shift + Sound / Title
Prog. Memo	TV/Radio /
<</Scan-	<< / Tune-
>>/Scan+	>> / Tune+





Original	Recharge
Volume+	Vol+
Repeat	Green / APP / Repeat
</Slow-	CH- / Page-
>/Slow+	CH+ / Page+
Repeat A/B	Yellow / YouTube / Repeat
<</Skip-	<< / Preset-
>>/Skip+	>> / Preset+
Volume-	Vol-
Stop/Mo/ST	Stop / Hold
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Clear	Exit / Cancel / Clear
Zoom	Zoom / Size
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Sleep	Sleep / Timer
RDS	AV / Input / RDS

Original	Recharge
PTY	Picture / Format

