





















 

















































Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol+
	Sub-T		Subtitle / EQ		FAV		Fav / Marker / PC
	Lang		Audio / Lang I/II		Down/CH-		Down
	Mute		Mute / Dimmer		Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/--		1		1
	Goto		Shift + Text /		2		2
	Page+		CH+ / Page+		3		3
	TTX		Text / Goto		Recall		Back / Return
	Repeat		Shift + Green / APP /		4		4
	Page-		CH- / Page-		5		5
	Menu		Menu / Home		6		6
	Up/CH+		Up		Info		Info / Angle
	Exit		Exit / Cancel / Clear		7		7
	Vol-		Vol-		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		<<		<< / Tune-













 

























Original		Rechange		Original		Rechange	
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause/Time Shift		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	Red/PVR		Red / Netflix / Search				
	Green/V-Format		Green / APP / Repeat				
	Yellow/Aspect		Yellow / YouTube / Repeat				
	Blue/Timer		Blue / Prime Video / Random				





Original	Rechange
 Power	 Power
 Sub-T	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Goto	 Shift + Text /
 Page+	 CH+ / Page+
 TTX	 Text / Goto
 Repeat	 Shift + Green / APP /
 Page-	 CH- / Page-
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right

Original	Rechange
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/CH-	 Down
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-





	Original	Recharge	Original	Recharge
	>>	>> / Tune+		
	l<<	l<< / Preset-		
	>>l	>>l / Preset+		
	Play	Play / Slow		
	Pause/Timeshift	Pause / Step / Freeze		
	Stop	Stop / Hold		
	Rec	Rec / Rec Mode		
	Red/PVR	Red / Netflix / Search		
	Green/V-Format	Green / APP / Repeat		
	Yellow/Aspect	Yellow / YouTube / Repeat		
	Blue/Timer	Blue / Prime Video / Random		

