 


 

 













 







 

 

















 







 



 



 



 




Original	Rechange	Original	Rechange
 Power	 Power	 0	 0
 Setup	 D. Menu	 Movie	 Shift + 1
 DTV	 Smart	 Music	 Shift + 2
 HDMI / AV	 AV	 Photo	 Shift + 3
 Mute	 Mute	 Vol -	 Vol -
 Edit	 Ch +	 Vol +	 Vol +
 Copy	 Ch -	 Up	 Up
 Info	 Info	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Exit	 Exit
 5	 5	 Home	 Shift + Smart
 6	 6	 Home	 Menu
 7	 7	 Timer REC	 Back
 8	 8	 EPG	 Guide
 9	 9	 Rec	 Rec



