



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Rechange
Display	Display / Media
TV / Radio	TV/Radio /
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol+	Vol+
Auto	Eject / Surround
CH+	CH+ / Page+
Vol-	Vol-
Aspect	Zoom / Size
CH-	CH- / Page-
Source	AV / Input / RDS





Original		Rechange	
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Play/Pause / Text		Play / Slow
	Play/Pause / Text		Pause / Step / Freeze
	Play/Pause / Text		Text / Goto
	Stop / Index		Stop / Hold
	Mix		Smart / List
	Reveal		Setup / OPT /
	<< / Hold		<< / Tune-
	>> / Subpage		>> / Tune+
	I<< / Size		I<< / Preset-
	>>I / Cancel		>>I / Preset+
	TimeShift		D.Menu / Top
	Rec		Rec / Rec Mode
	FAV-		Shift + CH- /
	FAV+		Shift + CH+ /

Original		Rechange	
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

