
 










 



 
 

 


 

 


| Original   | Recharge  | Original | Recharge   |
|------------|---|----------|--|
| PWR On/Off |  Power   | 2abc     |  2      |
| Mute       |  Mute    | 3def     |  3      |
| TV         |  TV/R    | 4ghi     |  4      |
| TV/SAT     |  AV      | 5jkl     |  5      |
| Menu       |  MENU    | 6mno     |  6      |
| Menu Up    |  Up      | 7pqrm    |  7      |
| Menu Left  |  Left    | 8tuv     |  8      |
| OK Enter   |  Ok      | 9wxyz    |  9      |
| Menu Right |  Right   | 0/10     |  0      |
| Exit       |  Exit    | Yellow   |  Yellow |
| Menu Down  |  Down   | H/V Play |  Play  |
| Volume+    |  Vol + |          |  |
| CH/Page+   |  Ch +  |          |  |
| Volume-    |  Vol - |          |  |
| Audio      |  Dual  |          |  |
| CH/Page-   |  Ch -  |          |  |
| 1. ?       |  1     |          |  |

