


 





Original	Recharge	Original	Recharge
 Power	 Power	 Return	 Back
 Program	 Sleep	 Angle	 Exit
 Subtitle/Copy	 Subt	 USB/Card	 Smart
 Open/Close	 Eject	 Up	 Up
 Display	 Shift + Info	 Down	 Down
 Step	 List	 Right	 Right
 ↔/A-B	 3D	 Left	 Left
 Repeat	 Shift + Text	 Enter	 Ok
 V-Mode	 Format	 Menu	 Menu
 N/P	 D. Menu	 Play	 Play
 PBC	 Shift + TV/R	 Pause	 Pause
 Zoom	 Shift + Eject	 Stop/PVR	 Stop
 Text/Title	 Text	 EPG	 Guide
 DVD/DVB	 AV	 Info	 Info
 Tv/Radio	 TV/R	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Setup	 Options	 Mute	 Mute





Original		Recharge		Original		Recharge	
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue/FAV		Blue
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	10		0				
	10+		Pre Ch				
	Goto		Media				
	<</Rev		<<				
	>>/Fwd		>>				
	I<</Prev		I<<				
	>>I/Next		>>I				
	Red		Red				

