



Original	Recharge	Original	Recharge
TV Power	Shift + Power	Mute	Mute / Dimmer
TV Input	Shift + AV / Input / RDS	CH+ / PG+	CH+ / Page+
Power	Power	Vol-	Vol-
Guide	Guide / EPG / -/--	CH- / PG-	CH- / Page-
Menu	Menu / Home	R	TV/Radio /
Text	Text / Goto	R	Shift + Green / APP /
Aspect	Picture / Format	Pause	Pause / Step / Freeze
Audio	Audio / Lang I/II	Stop	Stop / Hold
Subtitle	Subtitle / EQ	<< / Tune-	<< / Tune-
Back	Back / Return	Play	Play / Slow
Up	Up	>> / Tune+	>> / Tune+
Info	Info / Angle	I< Replay	I<< / Preset-
Left	Left	>I Skip	>>I / Preset+
OK	OK	Source	AV / Input / RDS
Right	Right	1	1
Down	Down	2	2
Vol+	Vol+	3	3





Original		Recharge	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Enter		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Recharge	

