



Original	Rechange
Power	Power
Open/Close	Eject / Surround
OSD	Display / Media
Step	+  Shift + Pause / Step /
DVD/USB	Smart / List
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
10+	Guide / EPG / -/--

Original	Rechange
Time	Sleep / Timer
Title	Sound / Title
Play	Play / Slow
Menu	Menu / Home
Setup	Setup / OPT /
Zoom	Zoom / Size
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
I<<	I<< / Preset-
>>I	>>I / Preset+
L/R	Picture / Format
N/P	+  Shift + Zoom /
Vol-	Vol-
Vol+	Vol+



