











 







 

 



 





 



 


 
 



 
 
 


 
 
 
 
 
 


 
 



 
 
 





 









 

 





Original		Rechange		Original		Rechange	
	Main Power On		Power		4		4
	Main Power Off	 + 	Shift + Power		5		5
	Source Power		AV		6		6
	Mute		Mute		7		7
	Volume+		Vol +		8		8
	Volume-		Vol -		9		9
	Phono	 + 	Shift + 1		0		0
	CD	 + 	Shift + 2		+		Pre Ch
	Tuner	 + 	Shift + 3		-		Guide
	Recorder 1 /CD-R	 + 	Shift + 4		A F/P		Smart
	AUX	 + 	Shift + 5		B -/--		Media
	DVD	 + 	Shift + 6		Mode		Format
	Recorder	 + 	Shift + 7		Memo		Rec
	Recorder 2/MD	 + 	Shift + 8		SCroll		Info
	1		1		Cancel		Back
	2		2		Text/1 Mode		Text
	3		3		Time/Mode 2		3D















 



 



 

 

















 




 
 


 






 






	Original		Recharge		Original		Recharge
	>>		>>				
	<<		<<				
	<<		<<				
	>>		>>				




 

 

 




 
 

 
 


 
 
 

 
 

 
 
 

 

 

 

 

 

 

 

 

 
 


 

 

 



 
 
 

 

 



 




Original		Recharge		Original		Recharge	
	Main Power On		Power		Text/1 Mode		Text
	Main Power Off	 + 	Shift + Power		Time/Mode 2		3D
	Source Power		AV		Mute		Mute
	1		1		Volume+		Vol +
	2		2		Volume-		Vol -
	3		3		Play		Play
	4		4		>>		>>
	5		5		<<		<<
	6		6		Stop		Stop
	7		7		<<		<<
	8		8		>>		>>
	9		9		Pause		Pause
	0		0		Open/Close		Eject
	+		Pre Ch				
	-		Guide				
	A F/P		Smart				
	B -/--		Media				



 




 
 



 

 
 






 
 


 



 
 


 



 







 
 



 
 

 

 





 
 









Original		Recharge		Original		Recharge	
	Main Power On		Power		-		Guide
	Main Power Off	 + 	Shift + Power		A F/P		Smart
	Source Power		AV		B -/--		Media
	Mute		Mute		Mode		Format
	Volume+		Vol +		Memo		Rec
	Volume-		Vol -		Scroll		Info
	1		1		Cancel		Back
	2		2		Text/1 Mode		Text
	3		3		Time/Mode 2		3D
	4		4		Play		Play
	5		5		>>		>>
	6		6		<<		<<
	7		7		Stop		Stop
	8		8		>>		>>
	9		9		<<		<<
	0		0		Pause		Pause
	+		Pre Ch		Open/Close		Eject





Original	Rechange	Original	Rechange
 Main Power On	 Power	 Mode	 Format
 Main Power Off	 +  Shift + Power	 Memo	 Rec
 Source Power	 AV	 Cancel	 Back
 1	 1	 Text/1 Mode	 Text
 2	 2	 Time/Mode 2	 3D
 3	 3	 Mute	 Mute
 4	 4	 Volume+	 Vol +
 5	 5	 Volume-	 Vol -
 6	 6	 Play	 Play
 7	 7	 >>	 >>
 8	 8	  <<	  <<
 9	 9	 Stop	 Stop
 0	 0	 >>	 >>
 +	 Pre Ch	 <<	 <<
 -	 Guide	 Pause	 Pause
 A F/P	 Smart	 <>	 Blue
 B -/-	 Media	 Open/Close	 Eject

