



 



 











 
 

 
 


 
 



 






 


 



 









 















Original		Recharge		Original		Recharge	
	Power		Power		Menu		Menu / Home
	<<		<< / Tune-		9		9
	>>		>> / Tune+		0/AV		AV / Input / RDS
	Stop		Stop / Hold		0/AV		0
	Wide		Picture / Format		i		Info / Angle
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Cancel		Shift + Exit / Cancel / Clear
	Yellow/><		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		Right		Right
	1		1		Exit		Exit / Cancel / Clear
	2		2		Down		Down
	3		3		OK		OK
	4		4		Play		Play / Slow
	5		5		Pause		Pause / Step / Freeze
	6		6		Lang(AD)		Audio / Lang I/II
	7		7		Subt.		Subtitle / EQ
	8		8		FAV		Fav / Marker / PC





Original	Recharge	Original	Recharge
 Tv/Radio	 TV/Radio /		
 P+	 CH+ / Page+		
 Vol+	 Vol+		
 Guide	 Guide / EPG / -/--		
 Mute	 Mute / Dimmer		
 Text	 Text / Goto		
 P-	 CH- / Page-		
 Vol-	 Vol-		

