

 



















 
























 

















 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 V +	 Vol+
 Aspect	 Shift + Picture / Format
 CH +	 CH + / Page+

Original	Rechange
 V -	 Vol-
 Home	 Shift + Menu /
 CH -	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 MTS	 Shift + Smart / List
 Rec	 Rec / Rec Mode





Original		Recharge		Original		Recharge	
	Guide		Guide / EPG / -/--		CAP		Shift + Display / Media
	Red		Red / Netflix / Search		Subtitle		Subtitle / EQ
	Green		Green / APP / Repeat		TV / Radio		TV/Radio /
	Yellow		Yellow / YouTube / Repeat		FAV		Fav / Marker / PC
	Blue		Blue / Prime Video / Random		Size / Mouse		Zoom / Size
	<< / Index		<< / Tune-		Hold / Refresh		Stop / Hold
	<< / Index		Shift + << /				
	Play/Pause /		Shift + Play /				
	Play/Pause /		Pause / Step / Freeze				
	Play/Pause /		Play / Slow				
	>> / TTX		>> / Tune+				
	>> / TTX		Shift + >> /				
	I<< / Sub.Pg		Shift + I<< / Preset-				
	I<< / Sub.Pg		I<< / Preset-				
	>>I / Reveal		>>I / Preset+				
	Stop / Mix		Shift + Rec / Rec Mode				
	Stop / Mix		Shift + Stop /				

Hold

