




 


 

 




 





 



 



 


 


 

 










 


 




	Original	Recharge		Original	Recharge
	Power		Power		0
	Up		Up		Exit/-/--
	Down		Down		PP
	Right		Right		Swap/P<P
	Left		Left		CH+
	OK/Select		Ok		CH-
	M		Menu		Vol+
	[i]/Info		Info		Vol-
	1		1		Mute
	2		2		I-II
	3		3		Tv/DTV
	4		4		AV/Source
	5		5		Red/↑
	6		6		Green/↓
	7		7		Yellow
	8		8		Blue
	9		9		[≡]
					Text



