 





























Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 CH-	 CH- / Page-
 Down	 Down
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 TTX	 Text / Goto
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 i	 Info / Angle
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /





Original		Recharge	
	Video	+ <b>4</b>	Shift + 4
	Scan		AV / Input / RDS
	Record		Rec / Rec Mode
	Device		Smart / List
	File		Display / Media
	Zoom		Zoom / Size
	Prev		I<< / Preset-
	Next		>>I / Preset+
	Roll		Sound / Title
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+

Original	Recharge

