

 









 

 
 


 













 

 

 

 

 








 

Original	Rechange
 On/Standby	 Power
 Display	 Display / Media
 DVD / BD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL/SAT	 Shift + 0
 Game	 Shift + 9
 AUX	 Shift + 7
 TV / TAPE	 Shift + 5
 TV / TAPE	 Shift + 1
 TUNER	 Shift + 6
 PORT	 Shift + 8
 CD	 Shift + 3
 Muting	 Mute / Dimmer
 CH/Disc/Album +	 CH + / Page+
 Vol+	 Vol+
 CH/Disc/Album-	 CH - / Page-
 Vol-	 Vol-

Original	Rechange
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie Tv	 Red / Netflix / Search
 Music	 Green / APP / Repeat



 



 

 

 










 



 







 

 





 

 

 





 

 





 



 



Original	Rechange
 Power BD/DVD	 Power
 DVD/BD	 Smart / List
 CBL/SAT	 Display / Media
 Vol+ Receiver	 Vol+
 Vol- Receiver	 Vol-
 Top Menu	 D.Menu / Top
 Up BD/DVD	 Up
 Menu BD/DVD	 Menu / Home
 Left BD/DVD	 Left
 Enter BD/DVD	 OK
 Right BD/DVD	 Right
 Setup BD/DVD	 Setup / OPT /
 Down BD/DVD	 Down
 Return BD/DVD	 Back / Return
 Audio BD/DVD	 Audio / Lang I/II
 I<< BD/DVD	 I<< / Preset-
 >>I BD/DVD	 >>I / Preset+

Original	Rechange
 << BD/DVD	 << / Tune-
 Play BD/DVD	 Play / Slow
 >> BD/DVD	 >> / Tune+
 Pause BD/DVD	 Pause / Step / Freeze
 Stop BD/DVD	 Stop / Hold
 Search BD/DVD	 Red / Netflix / Search
 Repeat BD/DVD	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1 BD/DVD	 1
 2 BD/DVD	 2
 3 BD/DVD	 3
 4 BD/DVD	 4
 5 BD/DVD	 5
 6 BD/DVD	 6
 7 BD/DVD	 7
 8 BD/DVD	 8

 








 



 

 




 
 

 


 




 

 




 










Original		Rechange		Original		Rechange	
	9 BD/DVD		9		<< CBL/SAT		Shift + << /
	+10/--/-10		Guide / EPG / --		Play CBL/SAT		Shift + Play /
	0/11 BD/DVD		0		>> CBL/SAT		Shift + >> /
	CLR/12 BD/DVD		Fav / Marker / PC		Pause CBL/SAT		Shift + Pause / Step /
	CLR/12 BD/DVD		Exit / Cancel / Clear		Stop CBL/SAT		Shift + Stop /
	Power CBL/SAT		Shift + Power		Movie Tv/Search CBL/SAT		Shift + Red / Netflix /
	CH Disc/Album+ CBL/SAT		Shift + CH+ /		Music/Repeat CBL/SAT		Shift + Green / APP /
	CH Disc/Album- CBL/SAT		Shift + CH- /		Game/Random		Shift + Yellow / YouTube /
	Guide CBL/SAT		Shift + Guide / EPG / --		Stereo/Play Mode CBL/SAT		Shift + Blue / Prime
	Up CBL/SAT		Shift + Up		1 CBL/SAT		Shift + 1
	Menu/Prev CH CBL/SAT		Shift + Menu /		2 CBL/SAT		Shift + 2
	Left CBL/SAT		Shift + Left		3 CBL/SAT		Shift + 3
	Enter CBL/SAT		Shift + OK		4 CBL/SAT		Shift + 4
	Right CBL/SAT		Shift + Right		5 CBL/SAT		Shift + 5
	Setup CBL/SAT		Shift + Setup / OPT / Tools		6 CBL/SAT		Shift + 6
	Down CBL/SAT		Shift + Down		7 CBL/SAT		Shift + 7
	Return CBL/SAT		Shift + Back / Return		8 CBL/SAT		Shift + 8





Original		Rechange		Original		Rechange	
	Power CD		Power		Play CD		Play / Slow
	CD		Smart / List		>> CD		>> / Tune+
	CH/Disc+ CD		CH+ / Page+		Pause CD		Pause / Step / Freeze
	Vol+ Receiver		Vol+		Stop CD		Stop / Hold
	CH/Disc- CD		CH- / Page-		Search CD		Red / Netflix / Search
	Vol- Receiver		Vol-		Repeat CD		Green / APP / Repeat
	Up CD		Up		Random CD		Blue / Prime Video / Random
	Left CD		Left		Play Mode CD		Yellow / YouTube / Repeat
	Enter CD		OK		1 CD		1
	Right CD		Right		2 CD		2
	Setup CD		Setup / OPT /		3 CD		3
	Down CD		Down		4 CD		4
	Return CD		Back / Return		5 CD		5
	Audio CD		Audio / Lang I/II		6 CD		6
	I<< CD		I<< / Preset-		7 CD		7
	>>I CD		>>I / Preset+		8 CD		8
	<< CD		<< / Tune-		9 CD		9





Original		Rechange		Original		Rechange	
	Power Receiver Zone 2		Power		>> Zone 2		>> / Tune+
	CH Disc/Album+ Zone 2		CH+ / Page+		Pause Zone 2		Pause / Step / Freeze
	Vol+ Zone 2		Vol+		Stop Zone 2		Stop / Hold
	CH Disc/Album- Zone 2		CH- / Page-		Movie Tv Zone		Red / Netflix / Search
	Vol- Zone 2		Vol-		Music Zone 2		Green / APP / Repeat
	Up Zone 2		Up		Game Zone 2		Yellow / YouTube / Repeat
	Left Zone 2		Left		Stereo Zone 2		Blue / Prime Video / Random
	Enter Zone 2		OK		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Setup Zone 2		Setup / OPT /		3 Zone 2		3
	Down Zone 2		Down		4 Zone 2		4
	Return Zone 2		Back / Return		5 Zone 2		5
	Audio Zone 2		Audio / Lang I/II		6 Zone 2		6
	I<< Zone 2		I<< / Preset-		7 Zone 2		7
	>>I Zone 2		>>I / Preset+		8 Zone 2		8
	<< Zone 2		<< / Tune-		9 Zone 2		9
	Play Zone 2		Play / Slow		+10/--/--10/D.Tun/ Dimmer Zone 2		Guide / EPG / -/--



