




 



 
 

 

Original	Recharge	Original	Recharge
On	Power	Level Down	Shift + CH- /
Standby	Shift + Power	Level Up	Shift + CH+ /
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
CH+/Disc+	CH+ / Page+	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
CH-/Disc-	CH- / Page-	>>	>> / Tune+
Left	Left	Rec / Random	Blue / Prime Video / Random
Enter	OK	Rec / Random	Rec / Rec Mode
Right	Right	Pause	Pause / Step / Freeze
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio Sel	Audio / Lang I/II	Input Sel. V1	1
CH Sel / Top Menu	D.Menu / Top	Input Sel. V2	4
Test / Menu	Menu / Home	Input Sel. TAP	5
Muting	Mute / Dimmer	Input Sel. TUN	6





Original

Rechange

	Input Sel. V3	 7	7
	Input Sel. V4	 8	8
	Input Sel. V5	 9	9
	Input Sel. PH	 0	0
	Pure A	 + 	Shift + 1
	Direct	 + 	Shift + 2
	Stereo	 + 	Shift + 3
	Surr.		Eject / Surround
	Surr.	 + 	Shift + 4
	All St.	 + 	Shift + 5
	DSP	 + 	Shift + 6
	SP A	 + 	Shift + 7
	SP B	 + 	Shift + 8
	CINE FLTR	 + 	Shift + 9
	Display		Display / Media
	Dimmer	 + 	Shift + Mute / Dimmer
	Zone 2		Smart / List

Original

Rechange















 

 



 







 

 




Original	Rechange
 Sleep	 Sleep / Timer
 On	 Power
 Standby	 Shift + Power
 Return	 Back / Return
 Setup	 Setup / OPT /
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-
 Audio Sel /	 Audio / Lang I/II
 Audio Sel /	 AV / Input / RDS
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Muting	 Mute / Dimmer
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-

Original	Rechange
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround
 Input Sel. DVD	 Shift + 2
 Input Sel. CD	 Shift + 3
 Input Sel. V1	 Shift + 1
 Input Sel. V2	 Shift + 4
 Input Sel. TAP	 Shift + 5
 Input Sel. TUN	 Shift + 6
 Input Sel. V3	 Shift + 7
 Input Sel. V4	 Shift + 8
 Input Sel. V5	 Shift + 9









	Original	Rechange	Original	Rechange
	Input Sel. PH	 +  Shift + 0		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	+10 / --/---	 Guide / EPG / --/---		
	0	 0		
	Search/Enter	 Fav / Marker / PC		
	Search/Enter	 Red / Netflix / Search		







Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

