 



 


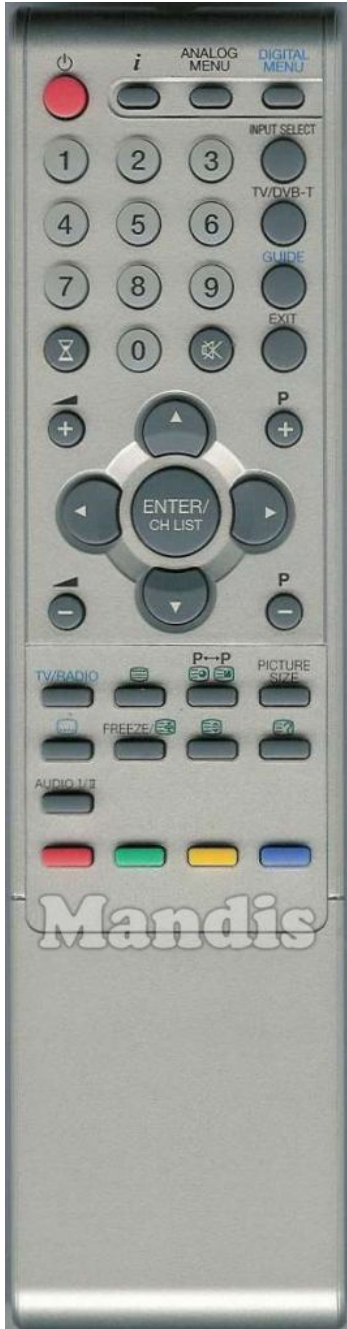







Original		Rechange		Original		Rechange	
	Power		Power		0		0
	i		Info / Angle		Mute		Mute / Dimmer
	Analog Menu		Menu / Home		Exit		Exit / Cancel / Clear
	Digital Menu		D.Menu / Top		Vol+		Vol+
	1		1		Up		Up
	2		2		P+		CH+ / Page+
	3		3		Left		Left
	Input Select		AV / Input / RDS		Enter/CH List		OK
	4		4		Enter/CH List		Smart / List
	5		5		Right		Right
	6		6		Vol-		Vol-
	TV/DVB-T		Display / Media		Down		Down
	7		7		P-		CH- / Page-
	8		8		TV/Radio		TV/Radio /
	9		9		[≡]		Text / Goto
	Guide (EPG)		Guide / EPG / -/-		[≡o] [≡o]/P<->P		Back / Return
	Timer		Sleep / Timer		Picture Size		Picture / Format





	Original	Recharge	Original	Recharge
	[...]	 EQ SUBTITLE		Subtitle / EQ
	Freeze / [=+]	 STEP-FREEZE 		Pause / Step / Freeze
	[≡♦]	 SIZE ZOOM		Zoom / Size
	[≡?]	 OPT-TOOLS SETUP		Setup / OPT /
	Audio I/II	 LANG I/II AUDIO		Audio / Lang I/II
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random

