



Original	Recharge	Original	Recharge
	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	I<</Skip Down		I<< / Preset-
	>>I / Skip Up		>>I / Preset+
	Subwoofer		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	SFC		Eject / Surround
	OSD		Picture / Format
	Timer		Sleep / Timer
	TV		TV/Radio /
	Top Menu		D.Menu / Top
	Setup		Setup / OPT /
	Test		Text / Goto
	TV / AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter / Set		OK
	Right		Right
	Cancel		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Page		Smart / List
	CH Select		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media



