



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Off Timer	Sleep / Timer
Guide	Guide / EPG / -/--
Up	Up
Tv/AV	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto

Original	Rechange
[=◆]/F.P.	Smart / List
[=i]/Index	Display / Media
[=+]/Hold	Shift + Stop /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
C	Back / Return
0/VCR	0
0/VCR	Shift + 4
i	Info / Angle
CH+	CH+ / Page+





Original		Recharge	
	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	[+]/Aspect		Picture / Format
	N		D.Menu / Top
	Power VCR		Shift + Power
	Rec VCR		Rec / Rec Mode
	Programme Down		Shift + CH-
	Programme Up		Shift + CH+
	<< VCR		<< / Tune-
	>> VCR		>> / Tune+
	Stop VCR		Stop / Hold
	Pause/Step VCR		Pause / Step / Freeze
	Play VCR		Play / Slow

Original	Recharge





Original	Recharge	Original	Recharge
Power DVD	Power		
Rec DVD	Rec / Rec Mode		
Programme Down	CH- / Page-		
Programme Up	CH+ / Page+		
I<< DVD	I<< / Preset-		
>>I DVD	>>I / Preset+		
Stop DVD	Stop / Hold		
Pause/Step DVD	Pause / Step / Freeze		
Play DVD	Play / Slow		

