









 



 




































 




 



 






 


 

 





| Original | | Recharge | | Original | | Recharge | |
|---|---------|---|---------------|---|------------|---|---------------------------|
|  | Standby |  | Power |  | Stop |  | Stop / Hold |
|  | 1 |  | 1 |  | Play/Pause |  | Play / Slow |
|  | 2 |  | 2 |  | Play/Pause |  | Pause / Step / Freeze |
|  | 3 |  | 3 |  | I>/Resume |  | Shift + Play / |
|  | 4 |  | 4 |  | Surround |  | Eject / Surround |
|  | 5 |  | 5 |  | Sound |  | Sound / Title |
|  | 6 |  | 6 |  | Night |  | Shift + Sleep / Timer |
|  | 7 |  | 7 |  | Mute |  | Mute / Dimmer |
|  | 8 |  | 8 |  | Repeat |  | Green / APP / Repeat |
|  | 9 |  | 9 |  | Repeat A-B |  | Yellow / YouTube / Repeat |
|  | 0 |  | 0 |  | Sleep |  | Sleep / Timer |
|  | Vol+ |  | Vol+ |  | DIM |  | Shift + Mute / Dimmer |
|  | Vol- |  | Vol- |  | Subw + |  | Up |
|  | Left |  | Left |  | Rear + |  | Shift + CH+ / |
|  | Right |  | Right |  | Center + |  | CH+ / Page+ |
|  | I<< |  | I<< / Preset- |  | Tv Vol+ |  | Shift + Vol+ |
|  | >>I |  | >>I / Preset+ |  | Subw - |  | Down |





| | Original | | Recharge | |
|---|----------|---|---------------|--|
|  | Rear - |  | Shift + CH- / | |
|  | Center - |  | CH- / Page- | |
|  | Tv Vol- |  | Shift + Vol- | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

| | Original | | Recharge | |
|--|----------|--|----------|--|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |





 



 

 

 









 

 



 







| Original | Rechange | Original | Rechange |
|--------------|---------------|------------|-------------------|
| Standby | Power | Stop | Stop / Hold |
| 1 | 1 | Play/Pause | Play / Slow |
| 2 | 2 | I>/Resume | + Shift + Play / |
| 3 | 3 | | |
| 4 | 4 | | |
| 5 | 5 | | |
| 6 | 6 | | |
| 7 | 7 | | |
| 8 | 8 | | |
| 9 | 9 | | |
| Disc (DVD) | D.Menu / Top | | |
| 0 | 0 | | |
| Vol+ | Vol+ | | |
| System (DVD) | Menu / Home | | |
| Vol- | Vol- | | |
| I<< | I<< / Preset- | | |
| >>I | >>I / Preset+ | | |





 



 

 

 













| Original | | Recharge | | Original | | Recharge | |
|---|---------|---|-------|----------|--|----------|--|
|  | Standby |  | Power | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | Up |  | Up | | | | |
|  | Left |  | Left | | | | |
|  | OK |  | OK | | | | |
|  | Right |  | Right | | | | |
|  | Down |  | Down | | | | |





| Original | | Recharge | | Original | | Recharge | |
|---|---------|---|-------|----------|--|----------|--|
|  | Standby |  | Power | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

