
 

 
 
 
 

 
 



 

 
 
 

 
 


 
 


 
 

 
 
 
 
 
 
 
 




 

 








 






 

 





Original		Recharge		Original		Recharge	
	Standby - On		Power		1		1
	TV / DVD		AV		2		2
	Edit		TV/R		3		3
	Select		Info		4		4
	CH+		Ch +		5		5
	Up		Up		6		6
	Down		Down		7		7
	CH-		Ch -		8		8
	Right		Right		9		9
	Left		Left		0		0
	OK		Ok		Stop		Stop
	Menu Disc		D. Menu		Play		Play
	Menu System		Menu		Rec		Rec
	Timer		Sleep		Pause		Pause
	T/C		Guide		Rec Mode		Shift + Rec
	Browser		Smart		I<<		I<<
	Tuner		Subt		>>I		>>I



 




 

 
 

 

 
 
 
 
 

 

 


 



Original	Rechange	Original	Rechange
 Return	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Tv Vol-	 Vol -		
 Tv Vol+	 Vol +		







Original	Recharge
 Standby - On	 Power
 TV / DVD	 TV/R
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 OK	 Ok
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Tuner	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Recharge
 7	 7
 8	 8
 9	 9
 0	 0
 Rec	 Rec
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv Vol-	 Vol -
 Tv Vol+	 Vol +

