 

 

 

 



 

 

 

 

 





 







 

 

 





 

 

 

 











 











Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround

Original	Recharge	Original	Recharge
 Power	 Power	 TV	 DVD
 Sleep	 Mute	 SAT	 AUX
 Mute	 SHIFT	 SLOW	 STEP - FREEZE
 Source	 HOLD	 TUNE-	 TUNE+
 1	 REC MODE	 PRESET-	 PRESET+
 2	 TITLE	 LANG I/II	 EQ
 3	 SURROUND	 SOUND	 AUDIO
 Audio/Lang	 SUBTITLE	 FORMAT	 SIZE
 4	 TIMER	 PICTURE	 ZOOM
 5	 PROGRAM	 TOP MENU	 OPT-TOOLS
 6	 TV RADIO	 D.MENU	 SETUP
 Tv/Radio	 RDS	 HOME	 ANGLE
 7	 AV INPUT	 MENU	 INFO
 8	 ENTER	 OK	 RETURN
 9	 VOL-	 CLEAR	 EXIT
 Vol-	 CANCEL	 LIST	 SMART
 Vol+	 CH PAGE	 MEDIA	 DISPLAY
 Down	 TV	DVD	CD - STB
TV	1	TAPE	TUNER
DVD	2	SUB.T	SUB.T
CD - STB	3	TITLE	INDEX
TV	4	ZOOM	SIZE
DVD	5	D.MENU	EPG
CD - STB	6	PROG	FAV
TV	7	P.MODE	S.MODE
DVD	8	ANGLE	SLOW
CD - STB	9	A-B	REPEAT
TV	0	GUIDE	EPG
DVD	NETFLIX	APP	YouTube
CD - STB	HDMI - BAT	SEARCH	REPEAT
TV	FAV MARKER	REPEAT A-B	RANDOM
DVD	Mandis SHOP	www.mandis.tv	





Original	Recharge
Rec	Rec / Rec Mode
Text	Text / Goto
<<	<< / Tune-
>>/Reveal	>> / Tune+
I<</Hold	I<< / Preset-
>>I/Sub.P	>>I / Preset+
SUB.T	Subtitle / EQ
Index/Title	Shift + Sound / Title
Size/Zoom	Zoom / Size
D.Menu	D.Menu / Top
EPG	Guide / EPG / -/--
FAV/Prog	Fav / Marker / PC
P.Mode/Lang	Picture / Format
S.Mode/Search	Sound / Title
Info/Display	Info / Angle
Red/Angle	Red / Netflix / Search
Green/Slow	Green / APP / Repeat

Original	Recharge
Yellow/A-B	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

