

 





























 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Smart Tv	 Smart / List
 0	 0
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Info	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Option	 Setup / OPT /
 P-	 CH- / Page-
 TV	 TV/Radio /
 Audio	 Audio / Lang I/II
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Shift + Smart / List





Original		Recharge		Original		Recharge	
[Red dot]	Rec	[REC MODE]	Rec / Rec Mode				
[Square]	Stop	[HOLD]	Stop / Hold				
[PRE-CH]	PRE-CH	[PC FAV MARKER]	Fav / Marker / PC				
[Left arrow]	<<	[TUNE-]	<< / Tune-				
[Play]	Play	[SLOW]	Play / Slow				
[Pause]	Pause	[STEP-FREEZE]	Pause / Step / Freeze				
[Right arrow]	>>	[TUNE+]	>> / Tune+				
[Red bar]	Red	[NETFLIX SEARCH]	Red / Netflix / Search				
[Green bar]	Green	[APP REPEAT]	Green / APP / Repeat				
[Yellow bar]	Yellow	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat				
[Blue bar]	Blue	[Prime Video RANDOM]	Blue / Prime Video / Random				

