



| Original | Rechange |
|--|--|
|  P100 |  Guide / EPG / -/-- |
|  Power |  Power |
|  REV |  Sleep / Timer |
|  DOUB |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Hold |  Stop / Hold |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  SUB |  Subtitle / EQ |
|  Update |  Display / Media |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  MIX |  D.Menu / Top |

| Original | Rechange |
|--|--|
|  AV |  AV / Input / RDS |
|  0 |  0 |
|  TV |  TV/Radio / |
|  P+ |  Up |
|  P+ |  CH+ / Page+ |
|  Mute |  Mute / Dimmer |
|  TV/TXT |  Text / Goto |
|  Menu |  Menu / Home |
|  Vol- |  Vol- |
|  Vol- |  Left |
|  OK |  OK |
|  Vol+ |  Vol+ |
|  Vol+ |  Right |
|  SWAP |  Back / Return |
|  P- |  CH- / Page- |
|  P- |  Down |
|  16:9 |  Picture / Format |





| | Original | Recharge | Original | Recharge |
|---|-------------|---|----------|----------|
|  | Red |  Red / Netflix / Search | | |
|  | Green |  Green / APP / Repeat | | |
|  | Yellow |  Yellow / YouTube / Repeat | | |
|  | Blue |  Blue / Prime Video / Random | | |
|  | Violet/Info |  Info / Angle | | |
|  | [] |  Zoom / Size | | |
|  | PC |  Fav / Marker / PC | | |
|  | PT |  Setup / OPT / | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

