




| Original   | Recharge   |
|--|--|
|  Power  |  Power                |
|  Mute   |  Mute / Dimmer        |
|  1      |  1                    |
|  2      |  2                    |
|  3      |  3                    |
|  4      |  4                    |
|  5      |  5                    |
|  6      |  6                    |
|  7      |  7                    |
|  8      |  8                    |
|  9     |  9                   |
|  0    |  0                  |
|  -/-- |  Guide / EPG / -/-- |
|  AV   |  AV / Input / RDS   |
|  Menu |  Menu / Home        |
|  Swap |  Back / Return      |
|  OK   |  OK                 |

| Original   | Recharge  |
|--|---|
|  Up                   |  Up                            |
|  PR+                  |  CH+ / Page+                   |
|  PR-                  |  CH- / Page-                   |
|  Down                 |  Down                          |
|  Right                |  Right                         |
|  Vol+                 |  Vol+                          |
|  Left                 |  Left                          |
|  Vol-                 |  Vol-                          |
|  TV/TX                |  Text / Goto                   |
|  PP                   |  Fav / Marker / PC             |
|  16:9                |  Setup / OPT /                |
|  Red                |  Red / Netflix / Search      |
|  Green              |  Green / APP / Repeat        |
|  Yellow             |  Yellow / YouTube / Repeat   |
|  Blue               |  Blue / Prime Video / Random |
|  Violet             |  Display / Media             |
|  [ ] Smart Controls |  Picture / Format            |



