



 
 





 

 





Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Prime Video / Random
	Text / Goto





Original	Recharge
[≡o]	TIMER SLEEP Sleep / Timer
Hold	HOLD Stop / Hold
[≡X]	CLEAR EXIT Exit / Cancel / Clear
Mix / PIP Swap	LIST SMART Smart / List
PIP / Size	SIZE ZOOM Zoom / Size
PIP Down / [≡?]	PRESET- I<< / Preset-
PIP Up / Index	PRESET+ >>I / Preset+
[TV]	PROGRAM TV/RADIO TV/Radio /
[AV]	RDS AV INPUT AV / Input / RDS

Original	Recharge

