










 








 
 




 










Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i / EPG	 Guide / EPG / -/--
 i / EPG	 Info / Angle
 0	 0
 List	 Smart / List
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up

Original	Rechange
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Swap	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Play	 Play / Slow
 Green / Play	 Green / APP / Repeat
 Blue / >> / Text	 >> / Tune+
 Blue / >> / Text	 Blue / Prime Video / Random





Original		Recharge	
TEXT	Blue / >> / Text	GOTO TEXT	Text / Goto
RADIO	Radio	SHIFT + TUNER 6	Shift + 6
RADIO	Radio	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
Yellow	Yellow / Pause	STEP - FREEZE	Pause / Step / Freeze
Yellow	Yellow / Pause	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Stop	Stop	HOLD	Stop / Hold
TV	TV	SHIFT + TV 1	Shift + 1
TV	TV	PROGRAM TV/RADIO	TV/Radio /
F1	F1	TITLE SOUND	Sound / Title
F2	F2	LANG I/II AUDIO	Audio / Lang I/II

Original		Recharge	

